

12 v

## **PLEASE NOTE:**

If the load is earthed, e.g. at the negative input of an inverter, do not Earth any other point on the circuit.

The negative terminals are not common on this type of controller.